KoehlerBrightStar

FREAKIN' BEACON™

MSHA MODEL 10K-221XX / UL MODEL 710XXX

United States Department of Labor MSHA Mine Safety and Health Administration

APPROVAL No. 18-A200001-0
TESTED FOR INTRINSIC SAFETY IN METHANE-AIR MIXTURES ONLY

WARNINGS:

1. **MHSA approved for use with two AAA Duracell (MN2400), Energizer (E92), and Procell (PC2400) batteries only.**
2. **Replace the batteries in fresh air only and replace all batteries at the same time. Do not mix batteries from different manufacturers or of different types.**
3. **The Koehler Helmet Flasher Accessory must not be opened in areas where permissibility is required.**

UL 913 5th Ed.
CSA C22.2 No 157-92

Class I, II, III
Div 1 & 2
Groups A-D, F, G
-20°C to +40°C
T4

WARNINGS:
Approved for use with Duracell MN2400, Procell PC 2400, Energizer E92 or Rayovac High Energy AAA
WARNING - SUBSTITUION OF COMPONENTS MAY IMPAIR I.S.
Avertissement - La substitution de composants peut compromettre la securite intrinseque
To reduce the risk of ignition of flammable/explosive atmosphere, batteries must be changed only in a location known to be nonhazardous
Avertissement: Pour reduire le risque d'incendie dans une atmosphere inflammable ou explosive, les piles ne doivent etre remplacees que dans une zone dont vous saves qu'elle n'est pas dangerous

OPERATING INSTRUCTIONS

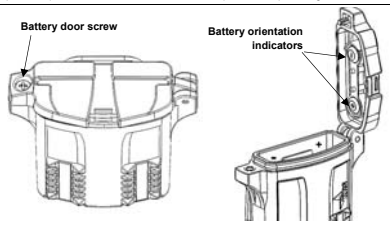

Battery Installation

- **Loosen battery door screw**
- **Install fresh batteries, with positive and negative battery orientation as indicated on battery door**
- **Close battery door, ensure battery door screw is tight to maintain seal**

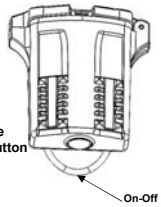

Operation

- **Press On-Off button once to turn device on**
- **The 'Freakin' Beacon' contains two user-selectable modes: Steady and Flash**
- **To switch between modes, quickly double press the on-off button.**
- **The next press after changing modes will then turn the device off**
- **With the next press of the On-Off button, the 'Freakin' Beacon' will default to the last selected mode**
- **Access auxiliary strobe mode by holding the on-off button for six seconds.**

Care and Maintenance

- **Keep inside of unit free from debris and moisture**
- **Clean external surfaces with soap and warm water only**

Limited Lifetime Warranty: All of Koehler BrightStar's products are warrantied against defects in materials or workmanship for the life of the product. Defective products will be repaired or replaced at manufacturer's discretion.

Koehler BrightStar | 380 Stewart Road | Hanover Township PA | 18706-1459 USA | 570-825-1900 | Flashlight.com

KoehlerBrightStar

FREAKIN' BEACON™

MSHA MODEL 10K-221XX / UL MODEL 710XXX

United States Department of Labor MSHA Mine Safety and Health Administration

APPROVAL No. 18-A200001-0
TESTED FOR INTRINSIC SAFETY IN METHANE-AIR MIXTURES ONLY

WARNINGS:

1. MHSA approved for use with two AAA Duracell (MN2400), Energizer (E92), and Procell (PC2400) batteries only.
2. Replace the batteries in fresh air only and replace all batteries at the same time. Do not mix batteries from different manufacturers or of different types.
3. The Koehler Helmet Flasher Accessory must not be opened in areas where permissibility is required.

UL 913 5th Ed.
CSA C22.2 No 157-92

Class I, II, III
Div 1 & 2
Groups A-D, F, G
-20°C to +40°C
T4

WARNINGS:
Approved for use with Duracell MN2400, Procell PC 2400, Energizer E92 or Rayovac High Energy AAA
WARNING - SUBSTITUION OF COMPONENTS MAY IMPAIR I.S.
Avertissement - La substitution de composants peut compromettre la securite intrinseque
To reduce the risk of ignition of flammable/explosive atmosphere, batteries must be changed only in a location known to be nonhazardous
Avertissement: Pour reduire le risque d'incendie dans une atmosphere inflammable ou explosive, les piles ne doivent etre remplacees que dans une zone dont vous saves qu'elle n'est pas dangerous

OPERATING INSTRUCTIONS

Battery door screw
Battery orientation indicators

Battery Installation

- Loosen battery door screw
- Install fresh batteries, with positive and negative battery orientation as indicated on battery door
- Close battery door, ensure battery door screw is tight to maintain seal

On-Off Button

Operation

- Press On-Off button once to turn device on
- The 'Freakin' Beacon' contains two user-selectable modes: Steady and Flash
- To switch between modes, quickly double press the on-off button.
- The next press after changing modes will then turn the device off
- With the next press of the On-Off button, the 'Freakin' Beacon' will default to the last selected mode
- Access auxiliary strobe mode by holding the on-off button for six seconds.

Care and Maintenance

- Keep inside of unit free from debris and moisture
- Clean external surfaces with soap and warm water only

Limited Lifetime Warranty: All of Koehler BrightStar's products are warrantied against defects in materials or workmanship for the life of the product. Defective products will be repaired or replaced at manufacturer's discretion.

Koehler BrightStar | 380 Stewart Road | Hanover Township PA | 18706-1459 USA | 570-825-1900 | Flashlight.com

KoehlerBrightStar

FREAKIN' BEACON™

MSHA MODEL 10K-221XX / UL MODEL 710XXX

United States Department of Labor MSHA Mine Safety and Health Administration

APPROVAL No. 18-A200001-0
TESTED FOR INTRINSIC SAFETY IN METHANE-AIR MIXTURES ONLY

WARNINGS:

1. MHSA approved for use with two AAA Duracell (MN2400), Energizer (E92), and Procell (PC2400) batteries only.
2. Replace the batteries in fresh air only and replace all batteries at the same time. Do not mix batteries from different manufacturers or of different types.
3. The Koehler Helmet Flasher Accessory must not be opened in areas where permissibility is required.

UL 913 5th Ed.
CSA C22.2 No 157-92

Class I, II, III
Div 1 & 2
Groups A-D, F, G
-20°C to +40°C
T4

WARNINGS:
Approved for use with Duracell MN2400, Procell PC 2400, Energizer E92 or Rayovac High Energy AAA
WARNING - SUBSTITUION OF COMPONENTS MAY IMPAIR I.S.
Avertissement - La substitution de composants peut compromettre la securite intrinseque
To reduce the risk of ignition of flammable/explosive atmosphere, batteries must be changed only in a location known to be nonhazardous
Avertissement: Pour reduire le risque d'incendie dans une atmosphere inflammable ou explosive, les piles ne doivent etre remplacees que dans une zone dont vous saves qu'elle n'est pas dangerous

OPERATING INSTRUCTIONS

Battery door screw
Battery orientation indicators

Battery Installation

- Loosen battery door screw
- Install fresh batteries, with positive and negative battery orientation as indicated on battery door
- Close battery door, ensure battery door screw is tight to maintain seal

On-Off Button

Operation

- Press On-Off button once to turn device on
- The 'Freakin' Beacon' contains two user-selectable modes: Steady and Flash
- To switch between modes, quickly double press the on-off button.
- The next press after changing modes will then turn the device off
- With the next press of the On-Off button, the 'Freakin' Beacon' will default to the last selected mode
- Access auxiliary strobe mode by holding the on-off button for six seconds.

Care and Maintenance

- Keep inside of unit free from debris and moisture
- Clean external surfaces with soap and warm water only

Limited Lifetime Warranty: All of Koehler BrightStar's products are warrantied against defects in materials or workmanship for the life of the product. Defective products will be repaired or replaced at manufacturer's discretion.

Koehler BrightStar | 380 Stewart Road | Hanover Township PA | 18706-1459 USA | 570-825-1900 | Flashlight.com